


ECOSURE WALL MOUNTED WATER BUTTS

Customer Guidelines

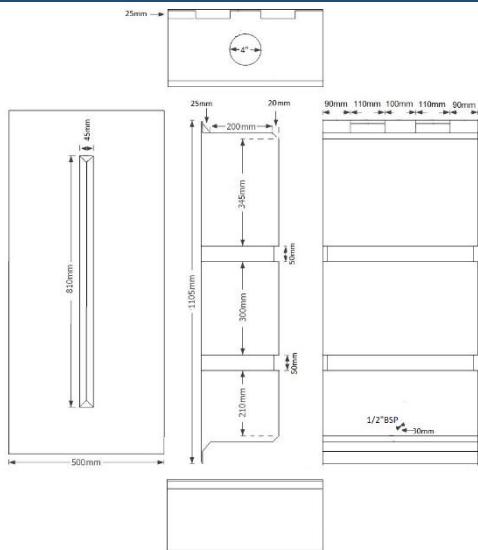

ECOSURE WALL MOUNTED WATER BUTT

Thank you for purchasing the Ecosure wall mounted water butt. We hope that you are happy with your purchase.

INSTALLATION GUIDELINES

Wall hung water butts are suitable for structurally sound, un-rendered brick walls only.

Please ensure that you drill into brickwork when installing, not into the mortar.

- The tank must be fixed to a structurally sound wall; the butt will weigh approximately 115 kg when full. The fixings supplied are suitable for brick only.
- Offer up the water butt to the wall, ensuring it is level and mark the hole positions on the wall.
- Remove the water butt and drill into the wall using an 8mm masonry drill bit.
- Tap in the fixings supplied, to a depth of approximately 35mm so as to leave sufficient thread to fasten the butt to the wall.
- Place the butt over the fixings. Place a washer and then a nut over each fixing. Tighten with a 13mm spanner.
- When fixing a tap to the threaded outlet, use PTFE tape and **DO NOT OVERTIGHTEN**.
- Down-pipe diverters can be installed approximately 30mm below the top of the tank. Ensure that the pipe running from the butt to the diverter is level, to act as an overflow for the tank.

Never drill into the mounting flange. If you are experiencing any problems when mounting the butt, please call our technical line for advice and assistance:

01763 261781, option 3



Scan to view our full range of water tanks

ECOSURE

Etills Ltd,
Unit 1 Whiting Way,
Melbourn,
Royston,
SG8 6NA



Call 01763 261781 for further advice or information